



V 4

ZERO and SPAN Calibration Instructions R320 Indicator

To Zero the Display

- ⊕ Press the **f** and **UNITS KEY** at the same time holding both for 2 seconds. The Display will beep twice and then show SETUP
- ⊕ The display will then show bUiLd
- ⊕ Press **ZERO** Display will show OPTiON
- ⊕ Press **ZERO** again Display will show CAL
- ⊕ Press **TARE** Display will show ZErO
- ⊕ Press **SELECT** Display will show weight approximately 0.000
- ⊕ Press **Print** Display will show Z. in P, when complete will show 0.000 exactly
- ⊕ Press the **ZERO** button **NINE** times until the display shows –END–
- ⊕ Press **f** Display will return to normal weighing

Load vehicle, weigh the vehicle at a weighbridge obtaining the NETT Payload

TO SPAN the vehicle

- ⊕ Press **f** and **UNITS KEY** at the same time holding both for 2 seconds. The Display will beep twice and then show bUiLd
- ⊕ Press **ZERO** Display will show OPTiON
- ⊕ Press **ZERO** again Display will show CAL
- ⊕ Press **TARE** twice Display will show SPAN
- ⊕ Press **SELECT** Display will show CLr.L n
- ⊕ Press **f** Display will show **flashing** digits
- ⊕ Press **SELECT** again The display will show a **flashing** digit
- ⊕ Press **SELECT** again To move the flashing along the line of digits
- ⊕ Press **Print** To adjust the flashing digit between 1 and 9, when the correct digit is shown
- ⊕ Press **SELECT** again To move the flashing digit across, repeat the above step until the correct weight is shown on the display. When the correct weight is shown
- ⊕ Press **f** Display will show S. in P then flash with the correct weight
- ⊕ Press the **ZERO** button **NINE** times until the display shows –END–
- ⊕ Press **f** Display will return to standard weighing mode

If you experience any problems please call us using 0044 1427 875574

www.onboardweighing.co.uk

