



V4 R320 basic Indicator ZERO and SPAN Calibration Instructions

To Zero the Display

- ⊕ Press the **f** and **POWER KEY** at the same time holding both for 2 seconds. The Display will beep twice and then show **SETUP**
- ⊕ The display will then show **bUId**
- ⊕ Press **ZERO** Display will show **OPTiON**
- ⊕ Press **ZERO** again Display will show **CAL**
- ⊕ Press **TARE** Display will show **ZerO**
- ⊕ Press **SELECT** Display will show weight approximately
- ⊕ Press **Print** Display will show **Z. in P**, when complete will show **0.000** exactly
- ⊕ Press the **ZERO** button **FIVE** times until the display shows **-END-**
- ⊕ Press **f** Display will return to normal weighing

Load vehicle, weigh the vehicle at a weighbridge obtaining the NETT Payload TO SPAN the vehicle

- ⊕ Press **f** and **POWER KEY** at the same time holding both for 2 seconds. The Display will beep twice and then show **bUId**
- ⊕ Press **ZERO** Display will show **OPTiON**
- ⊕ Press **ZERO** again Display will show **CAL**
- ⊕ Press **TARE** twice Display will show **SPAN**
- ⊕ Press **SELECT** Display will show **CLr.L n**
- ⊕ Press **f** The display will show **flashing** digits
- ⊕ Press **SELECT** The display will show a **flashing** digit
- ⊕ Press **SELECT** again To move the flashing along the line of digits
- ⊕ Press **Print** To adjust the flashing digit between **1** and **9**, when the correct digit is shown
- ⊕ Press **SELECT** again To move the flashing digit across, repeat the above step until the correct weight is shown on the display. When the correct weight is shown
- ⊕ Press **f** Display will show **S. in P** then flash with the correct weight
- ⊕ Press the **ZERO** button **FIVE** times until the display shows **-END-**
- ⊕ Press **f** Display will return to standard weighing mode

If you experience any problems please call us using 0044 1427 875574
www.onboardweighing.co.uk