



Calibration Instructions X320 Indicator (V4.0)

Prior to attempting to set the instrument ensure the button area is clean and dry

To Zero the Display

- ⊕ Press **GROSS/NET** and **POWER** key at the same time holding both for 3-4 seconds. The display will beep twice and then show **SETUP**
- ⊕ The display will then show **bUiLd**
- ⊕ Stroke **ZERO** Display will show **OPtiON**
- ⊕ Stroke **ZERO** again Display will show **CAL**
- ⊕ Stroke **TARE** Display will show **ZERo**
- ⊕ Stroke **GROSS/NET** Display will show a weight
- ⊕ Stroke **Print** Display will show **Z. in P**, when complete will show **0.000kg** exactly
- ⊕ Stroke the **ZERO** button **NINE** times until the display shows **-END-**
- ⊕ Stroke **f** Display will return to normal weighing

Load and weigh the vehicle at a weighbridge, obtaining the **NETT Payload**

- ⊕ Stroke **GROSS/NET** and **POWER KEY** at the same time holding both for 3-4 seconds The Display will beep twice and then show **bUiLd**
- ⊕ Stroke **ZERO** Display will show **OPtiON**
- ⊕ Stroke **ZERO** again Display will show **CAL**
- ⊕ Stroke **TARE** twice Display will show **SPAN**
- ⊕ Stroke **GROSS/NET** Display will show **CLr.L n**
- ⊕ Stroke **f** Display will show **flashing** digits
- ⊕ Stroke **GROSS/NET** The display will show a **flashing** digit on the left side
- ⊕ Stroke **GROSS/NET** To move the flashing digit along the line of digits
- ⊕ Stroke **PRINT** To adjust the flashing digit between 1 and 9, Repeat both steps until the correct weight is shown
- ⊕ Press **f** Display will show **S. in P** then flash correct weight
- ⊕ Stroke the **ZERO** button **NINE** times until the display shows **-END-**
- ⊕ Stroke **f** Display will return to standard weighing mode

If you experience any problems please contact us on 01427 875574

www.onboardweighing.co.uk



Alarm Setting Instructions

Prior to attempting to set the instrument ensure the button area is clean and dry

Alarm Setting Instructions (VERSION 4)

To set the Loaded Weight at which the alarm will sound:

- ⊕ Press and hold the **f** button 3-4 seconds, the display will show **SEtPt.1** then 000.000kg, the digit on the left will flash. The display is now in the alarm setting mode
- ⊕ Press the **GROSS/NET** button repeatedly to move between the digits (only the digit flashing can be altered) Use the **PRINT** button adjust the flashing digit between **1 and 9**. Adjust the weight shown on the display to be that weight at which you require the alarm to sound, for example 029.000kg
- ⊕ Press the **f** button. Display will show 0.000kg
- ⊕ Load the vehicle, the alarm will sound when the target weight is achieved
- ⊕ Once the target weight is obtained Stroke **f** to silence the alarm.

If the same target weight is required for every load, simply press **f** at any time prior to or during loading and the display will show the last target weight entered, for example 029.000kg, if this target weight is required again Stroke **f** and load the vehicle. The alarm will then sound once the target weight is obtained.