



PM1150CB

(Software 01.08)

Zero Setting Instructions

Only undertake this setup when the body is empty, if the vehicle is a tipper raise the body 6-8 inches clear of the chassis

- ⊕ When Indicator is switched on, press and hold the **ON/OFF** button for about 2 seconds, the indicator will show



- ⊕ Release the **ON/OFF** button, the display will show Calibration




- ⊕ Press the **DOWN** arrow button repeatedly until the display shows



- ⊕ Press the **ENTER** Button to confirm zero, display will show



- ⊕ Now exit the calibration set up by pressing the up arrow repeatedly until the display shows

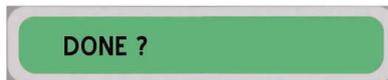

- ⊕ Now press the enter button and the display will return to normal weighing mode and show NET 0Kg



If you experience any problems please contact us on 01427 875574
www.onboardweighing.co.uk



PM1150CB

(Software 01.08)

Span or Calibration Weight Setting Instructions

Only undertake this setup when the body is loaded with a known weight, if the vehicle is a tipper raise the body 6-8 inches clear of the chassis

- ⊕ When Indicator is switched on, press and hold the **ON/OFF** button for about 2 seconds, the indicator will show



- ⊕ Release the **ON/OFF** button, the display will show Calibration



- ⊕ Press the **DOWN** arrow button repeatedly until the display shows



- ⊕ Press the **PRINT/EDIT** button to begin altering the payload of the vehicle. When editing the CAL WT. The **DOWN** arrow decreases and **UP** arrow increases the flashing digit, the **EDIT/PRINT** button moves the flashing digit along the line. To accept the new CAL WT. press the **ENTER** button. Then press the **DOWN** arrow, the display will show



- ⊕ Press **ENTER** to calibrate the loaded vehicle. The display will show



- ⊕ Now exit the calibration set up by pressing the **up** arrow repeatedly until the display shows



- ⊕ Now press the **enter** button and the display will return to normal weighing mode and show **NET 0Kg**



If you experience any problems please contact us on 01427 875574
www.onboardweighing.co.uk